



ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
1		Hair Guard Screw	
1a	04025	Black	2
1b	04654	Gold-Tone	2
2		Hair Guard	
2a	04071	Outliner (CSA)	1
2b	04203	Outliner (UL)	1
2c	04065	T-Outliner (UL)	1
2d	04660	Gold-Tone Hair Guard	1
3		Cover Screw	
3a	04023	Brite zinc	2
3b	04653	Black	2
4		Upper Cover Assembly	
4a	04602	Grey Assembly (UL)(1a, 2b)	1
4b	04623	Grey Assembly (CSA)(1a, 2b)	1
4c	04646	Black Assembly (UL)(1b, 2b)	1
5	04229	Terminal Screw (CSA 3-Wire)	1
6	01296	Lockwasher (CSA 3-Wire)	1
7	01403	Switch Pad Screw	1
8	05032	Field Screw	2
9		Motor Assembly	
9a	S04515	2 Wire-UL (12, 25, 26)	1
9b	S04527	3 Wire-CSA (12,25,26)	1
10	S04508	Field Assembly	1

ITEM NO.	PART NO.	DESCRIPTION	QTY. REQ'D
11		Cord Set	
11a	04624	2 Wire-UL	1
11b	04617	3-Wire-CSA	1
12	65842	Hanger Hook	1
13		Lower Case	
13a	06527	Grey	1
13b	04629	Black	1
14	26899	Lower Blade Screw	2
15	04064	Fiber T-Guide	1
16	15886	T-Guide Washer	1
17	04648	T-Guide Screw	2
18	04022	Field Screw	1
19	04108	Tension Spring Assembly	2
20	32527	New Style Tension Screw (no washer)	2
21	29756	Tension Spring Screw	2
22	04532	Armature Spring Assembly (#26)	1
23	03999	Armature Support Screw	1

IMPORTANT INFORMATION

When ordering repair parts, include part number, part name and model of trimmer. For best performance, trimmer blades should be CLEANED and OILED with Andis Clipper Oil before and after use. If repair is necessary, return to any Andis Authorized Repair Service Station, or to Andis Company, 1800 Renaissance Blvd., Sturtevant, Wisconsin, 53177 U.S.A.. Pack carefully, mail either Insured Parcel Post, or U.P.S. , attach a letter to outside of package explaining difficulty.